

User's manual
(Translation of original
instructions)

EN



innova

N421055A - Rev. 00 - 03/2024

Filoterra

EEA649 - EEB649 - EFA649 - EFB649
EEB749 - EGB749 - B3V151

First of all, we would like to thank you for having chosen a device of our production.

We are sure you will be happy with it because it represents the state of the art in the technology of home air conditioning.

By following the suggestions contained in this manual, the product you have purchased will operate without problems giving you optimum room temperatures with minimum energy costs.

INNOVA S.r.l.

Refer to the Installer Manual of the paired unit.

Markings



TABLE OF CONTENTS







1	Coding	<u>p. 5</u>
1.1	Product related coding	<u>p. 5</u>
2	General information	<u>p. 6</u>
2.1	About the manual	<u>p. 6</u>
2.1.1	Editorial pictograms	<u>p. 6</u>
2.1.2	Pictograms on the product	<u>p. 6</u>
2.1.3	Recipients	<u>p. 6</u>
2.1.4	Manual organisation	<u>p. 6</u>
2.2	General warnings	<u>p. 7</u>
2.3	Basic rules of security	<u>p. 7</u>
2.4	Disposal	<u>p. 8</u>
3	M7 series controls EEB749 - EFB749 - EGB749	<u>p. 9</u>
3.1	Interface	<u>p. 9</u>
3.1.1	Description	<u>p. 9</u>
3.1.2	Display	<u>p. 9</u>
3.1.3	Keys functions	<u>p. 9</u>
3.2	Main functions	<u>p. 10</u>
3.2.1	General start-up	<u>p. 10</u>
3.2.2	Put in stand-by the control	<u>p. 10</u>
3.2.3	Set room temperature	<u>p. 10</u>
3.2.4	Cooling only mode	<u>p. 10</u>
3.2.5	Heating only mode	<u>p. 10</u>
3.2.6	Automatic operation	<u>p. 10</u>
3.2.7	Minimum mode operation	<u>p. 10</u>
3.2.8	Maximum ventilation speed	<u>p. 10</u>
3.2.9	Set the key lock	<u>p. 10</u>
3.3	Basic menu	<u>p. 10</u>
3.3.1	Menu items	<u>p. 11</u>
	Set AIR probe offset	<u>p. 11</u>
	Set probe offset RH	<u>p. 11</u>
	Set the humidity setpoint	<u>p. 11</u>
	Setting the humidity hysteresis	<u>p. 11</u>
3.3.2	Scale	<u>p. 11</u>
3.3.3	Adjusting buzzer volume	<u>p. 11</u>
3.4	Warnings	<u>p. 11</u>
3.4.1	Long period shut-down	<u>p. 11</u>
3.4.2	In case of fancoil blockage	<u>p. 11</u>
3.4.3	Alarm display on wall control panel	<u>p. 12</u>
3.4.4	Reset filter cleaner alarm	<u>p. 12</u>

4	Smart Touch remote controls EEA649 - EEB649 - EFA649 - EFB649	<u>p. 13</u>
4.1	Interface	<u>p. 13</u>
4.1.1	Description	<u>p. 13</u>
4.1.2	Display	<u>p. 13</u>
4.1.3	Keys functions	<u>p. 13</u>
4.2	Main functions.	<u>p. 14</u>
4.2.1	General start-up	<u>p. 14</u>
4.2.2	Operating mode set-up	<u>p. 14</u>
4.2.3	Put in stand-by the control.	<u>p. 14</u>
4.2.4	Set room temperature	<u>p. 14</u>
4.2.5	Automatic operation	<u>p. 14</u>
4.2.6	Silent operation	<u>p. 14</u>
4.2.7	Night function	<u>p. 14</u>
4.2.8	Maximum ventilation speed	<u>p. 14</u>
4.2.9	Set the key lock.	<u>p. 14</u>
4.2.10	Brightness reduction	<u>p. 14</u>
4.2.11	Room temperature probe offset adjustment	<u>p. 15</u>
4.2.12	Deactivation	<u>p. 15</u>
4.2.13	WiFi network On, Off and Reset.	<u>p. 15</u>
4.3	Warnings	<u>p. 15</u>
4.3.1	Long period shut-down	<u>p. 15</u>
4.3.2	Alarm display on wall control panel	<u>p. 15</u>
5	Maintenance	<u>p. 16</u>
5.1	Preliminary warnings.	<u>p. 16</u>
5.2	Routine maintenance.	<u>p. 16</u>
5.2.1	External cleaning	<u>p. 16</u>
5.2.2	Air intake filter cleaning	<u>p. 16</u>
5.3	Suggestions for energy saving	<u>p. 17</u>

CODING

1.1 Product related coding

⚠ The present manual refers to the product: • Filoterra

Accessory description	Combinable products	Code
Wall-mounted control panels M7 series		
Control panels		
	LED electronic control panel with touch interface, wall-mounted complete with thermostat and room temperature and relative humidity probe. Cable connection. Colour white	All EEB749II
	LED electronic control panel with touch interface, wall-mounted complete with thermostat and room temperature and relative humidity probe with integrated WiFi module, InnovAPP. Cable connection. Colour white	All EFB749II
	LED electronic control panel with touch interface, wall-mounted complete with thermostat and room temperature and relative humidity probe. Bluetooth connection. Colour white	All EGB749II
Wall mounted controls smart touch series		
Control panels		
	SMART TOUCH wall mounted control panel with thermostat and room temperature and relative humidity probe. Colour black	All EEA649II
	SMART TOUCH wall mounted control panel with thermostat and room temperature and relative humidity probe. Colour white	All EEB649II
	SMART TOUCH wall mounted control panel with thermostat and room temperature and relative humidity probe with integrated WiFi module, InnovAPP. Colour black	All EFA649II (1)
	SMART TOUCH wall mounted control panel with thermostat and room temperature and relative humidity probe with integrated WiFi module, InnovAPP. Colour white	All EFB649II (1)
WALL MOUNTED STANDARD FANCOIL CONTROLS		
Control panels		
	Wall mounted control with thermostat, summer/winter and speed selectors	All B3V151II
Network controls		
Butler		
	BUTLER: codes, accessories and price list in relevant section	All

1. The control panel is connected to the device via cable. The WiFi antenna allows remote management via app.

GENERAL INFORMATION

2.1 About the manual

This manual was written to provide all the explanations for the correct management of the appliance.

- ⚠ This instruction manual forms an integral part of the device and therefore must be carefully preserved and must ALWAYS travel with it, even if you transfer the device to another owner or relocate it to other premises. If the manual gets damaged or lost, download a copy from the website.
- ⚠ Read this manual carefully before proceeding with any operation and follow the instructions in the individual chapters.
- ⚠ The manufacturer is not responsible for damages to persons or property caused by failure to follow the instructions in this manual.
- ⚠ This document is restricted in use to the terms of the law and may not be copied or transferred to third parties without the express authorization of the manufacturer.

2.1.1 Editorial pictograms

The pictograms in the next chapter provide the necessary information for correct, safe use of the machine in a rapid, unmistakable way.

Related to security

- ⚠ **High risk warning (bold text)**
 - The operation described above presents a risk of serious physical injury, fatality, major damage to the appliance and/or to the environment if not carried out in compliance with safety regulations.
- ⚠ Low risk warning (plain text)
 - The operation described above presents a risk of minor physical injury or minor damage to the appliance and/or to the environment if not carried out in compliance with safety regulations.
- ⊘ Prohibition (plain text)
 - Refers to prohibited actions.
- i **Important information (bold text)**
 - This indicates important information that must be taken into account during the operations.

In the texts

- procedures
- lists

In the control panels

- actions required
- Expected responses following an action.*

In the figures

- 1 The numbers indicate the individual components.
- A The capital letters indicate component assemblies.
- ① The white numbers in black marks indicate a series of actions to be carried out in sequence.
- Ⓐ The black letter in white identifies an image when there are several images in the same figure.

2.1.2 Pictograms on the product

Symbols are used in some parts of the appliance:

Related to security

- ⚠ **Caution: electrical danger**
 - The concerned personnel is informed to the presence of electricity and the risk of suffering an electric shock.

2.1.3 Recipients

User

Non-expert person capable of operating the product in safe conditions for people, for the product itself and the environment, interpreting an elementary diagnostic of faults and abnormal operating conditions, carrying out simple adjustment, checking and maintenance operations.

Installer

Expert person qualified to position and connect (hydraulically, electrically, etc.) the unit to the plant; this person is responsible for handling and correct installation according to the instructions provided in this manual and the national standards currently in force.

Technical Service Centre

Expert and qualified person authorised directly by the manufacturer to carry out all routine and supplementary maintenance operations, as well as every adjustment, check, repair and replacement of parts necessary during the life of the unit itself.

2.1.4 Manual organisation

The manual is divided into sections each dedicated to one or more target groups.

Coding

It addresses all recipients. It contains the list of products and/or accessories referred to in the manual.

General information

It addresses all recipients. It contains general information and important warnings that should be known before installing and using the appliance.

Product presentation

It addresses all recipients.

It contains the information to identify the product, its components, compatible accessories and destination of use.

Installation

It is addressed exclusively to the installer.

It contains specific warnings and all the information necessary for positioning, mounting and connecting the appliance.

Commissioning, maintenance and troubleshooting

They are addressed exclusively to the Technical Assistance Centre.

It contains specific warnings useful information for the most common commissioning and routine maintenance.

Configuration accessories

It is addressed to the installer and the Technical Assistance Centre.

It contains specific warnings and all detailed information on configuration accessories.

Technical information

It addresses all recipients.

It contains detailed technical information about the appliance.

2.2 General warnings

- ⚠ Specific warnings are given in each chapter of the document and must be read before starting operations.
- ⚠ All personnel involved must be aware of the operations and dangers that may arise when beginning all unit installation operations.
- ⚠ Installation performed outside the warnings provided in this manual and use of the appliance outside the prescribed temperature limits will invalidate the warranty.
- ⚠ The installation and maintenance of climate control equipment could be dangerous because there is live electrical components inside the appliances. The installation, initial start-up and subsequent maintenance phases must be carried out exclusively by authorised and qualified personnel (see first start-up request form enclosed with the appliance).
- ⚠ Any contractual or extra-contractual liability for damage caused to persons, animals or property, due to installation, adjustment and maintenance errors or improper use is excluded. All uses not expressly indicated in this manual are not permitted.
- ⚠ Only qualified installer companies are authorised to install the device. After having completed installation, the installer will issue a declaration of conformity to the plant manager, as required by the applicable standards and the guidelines provided by contractor's instruction manual supplied with the device.
- ⚠ First start-up and repair or maintenance operations must be carried out by the Technical Assistance Centre or by qualified personnel following the provisions of this manual.
- ⚠ Do not modify or tamper with the appliance as this can lead to dangerous situations.
- ⚠ Use suitable accident-prevention clothing and equipment during installation and/or maintenance operations. The manufacturer is not liable for the non-observance of the current safety and accident prevention regulations.
- ⚠ In the event of liquid or oil leaks, set the master switch of the plant to "off" and close the water taps. Call the authorised Technical Assistance Centre or professionally qualified personnel as soon as possible and do not work on the appliance yourself.
- ⚠ In case of replacement of parts, use only original parts.
- ⚠ The manufacturer reserves the right to make changes to its models at any time to improve its product, without prejudice to the essential characteristics described in this manual. The manufacturer is not obliged to add such modifications to machines previously manufactured, already delivered or under construction.
- ⚠ The unit can be used by children over the age of 8, and by people with reduced physical, sensory or mental capabilities, or with no experience or necessary knowledge, as long as they are monitored or after they have received instructions on the safe use of the unit and have understood the dangers involved. Children must not play with the appliance. The cleaning and maintenance that must be performed by the user should not be carried out by children without supervision.

2.3 Basic rules of security

Please keep in mind that the use of products powered by electricity and water call for operators to comply with certain essential safety rules:

- ⊖ The use of the appliance to children and unassisted disabled persons is prohibited.
- ⊖ It is forbidden to touch the device with wet or damp body parts.
- ⊖ It is forbidden to carry out any operation before disconnecting the appliance from the power supply by setting the plant master switch to "off".
- ⊖ It is forbidden to modify the safety or adjustment devices or adjust without authorization and indications of the manufacturer.
- ⊖ It is forbidden to pull, unplug or twist the device's electric cables, even if it is disconnected from the mains.
- ⊖ It is forbidden to introduce objects and substances through the air inlet and outlet grilles.
- ⊖ It is forbidden to open the access doors of the device's internal parts without first having set main switch of the system to "off".

- ⊖ It is forbidden to dispose of, or leave in the reach of children, the packaging materials which could become a source of danger.

2.4 Disposal



The symbol on the product or its packaging indicates that the product must not be treated as normal household waste, but must be taken to the appropriate collection point for the recycling of electrical and electronic equipment.

Proper disposal of this product avoids harm to humans and the environment and promotes the reuse of valuable raw materials.

For more detailed information about the recycling of this product, contact your local city office, your household waste disposal service or the shop where you purchased the product.

Illegal disposal of the product by the user involves the application of the administrative sanctions provided for by the regulations in force.

This provision is only valid in the EU Member States.

M7 SERIES CONTROLS EEB749 - EFB749 - EGB749

3.1 Interface

3.1.1 Description

M7 series LED electronic control panels with touch interface for wall installation allow:

- room temperature control
- management of the main functions of the device
- temperature and humidity measurement
- fan speed regulation

They are fitted with:

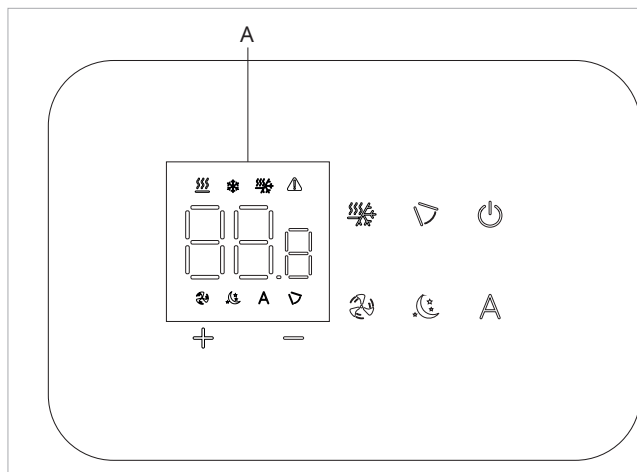
- internal memory with data saving even in case of shut-down or power outage

⚠ After 20 seconds after the last action the panel brightness is reduced, only the room temperature is seen on the display.

⚠ The maximum brightness is restored to the pressure of any key.

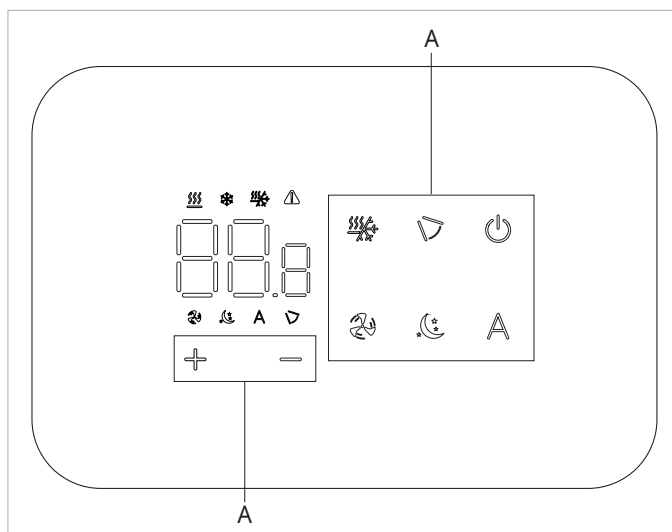
3.1.2 Display

Statuses and active alarms on display.



A	Display area
	Setpoint
	Temperature value increase function
	Temperature value decrease function
	Power / Standby
	Alarm signals
	Flap control function
	Maximum mode
	Heating / Cooling (Cannot be used)
	Cooling
	Heating
	Auto Mode
	Minimum mode

3.1.3 Keys functions



A	Keys area
	Increases the temperature value
	Decreases the temperature value
	This can be used to switch the unit on or off
	Allows flap management
	Allows the maximum ventilation speed function to be activated
	This can be used to select the operating mode (Cooling or Heating)
	Enables automatic mode
	Allows activation of the minimum mode function with ventilation speed limitation



3.2 Main functions

3.2.1 General start-up

Before the activation:



- ⚠ Make sure that the remote control is connected to the mains.
- ⚠ In case of a master switch on the power supply line, switch on the system by inserting the switch.

To activate the wall control panel

- press the  key for about 2 seconds
The text  appearing on the display.
The device turns on.



3.2.2 Put in stand-by the control

To put in stand-by the control

- press the  key for about 2 seconds
The symbol  appears
The control goes out.



- ⚠ In stand-by mode, the control guarantees antifreeze protection.
- ⚠ In case of temperature <5 °C, the hot water solenoid valve outputs and boiler consent are activated automatically.

To re-activate the control

- press the  key for about 2 seconds
Until the appearance of .

3.2.3 Set room temperature



To set-up the temperature

- operate the   keys to decrease or increase the desired value
The displayed value change.

- ⚠ The adjustment range goes from 16 °C to 28 °C, with a resolution of 0,5 °C.
- ⚠ Out of range values from 5 °C and 40 °C are allowed, except in automatic mode. These value should be set only for short periods of time.

3.2.4 Cooling only mode



To select the Cooling operation

- press  for about 2 seconds
The lighted  symbol in the display area indicates that the Cooling function is activated.
The device dehumidifies and cools the room.

- ⚠ In cooling function the symbols is alight with setpoint lower than the room temperature.

3.2.5 Heating only mode



To select the Heating operation

- press  for about 2 seconds
The symbol  on indicates the Heating function enable.
The device heats the room.

- ⚠ In heating function the symbols is alight with setpoint higher than the room temperature.

3.2.6 Automatic operation



To select the Automatic function

- press the  key for about 2 seconds
The symbol  on indicates the Automatic function enable.

- ⚠ The ventilation speed is automatically adjusted between a minimum value and a maximum value based on an algorithm type PI, according to the actual distance from the room temperature set-point.

3.2.7 Minimum mode operation

To select minimum mode operation

- press the  key for about 2 seconds
The symbol  on indicates that fan operation in minimum mode.



- ⚠ In this mode the fan is set to minimum speed.

To deselect minimum mode operation

- press the  or 
The function of the fan is changed.

3.2.8 Maximum ventilation speed

To select the operation at the maximum ventilation speed




- press the  key for about 2 seconds
The symbol  on indicates the maximum speed function enable

- ⚠ Maximum power output is immediately obtained both in heating and cooling.

- ⚠ After reaching the desired room temperature, select a different function to increase the thermal and acoustic comfort.

3.2.9 Set the key lock

To set-up the key locking



- press both keys   for 3 seconds
Appears .




- ⚠ All settings are inhibited by the user.

- ⚠ Repeat the sequence to unlock the control.



3.3 Basic menu

To access the basic menu


- with the display off, hold down  for 10 seconds
The device turns on and  appears

- keep pressed until the indication  appears
- release the  key
The symbol  appears


To navigate in the menu


- use the icons  

To select a menu item and to confirm the changes made

- press the icon 
- Confirming the change takes you to the next item.*

To exit the menu

- press the icon  for 10 seconds
- or wait 30 seconds the automatic shutdown

 After 30 seconds from the last action the control goes out and the settings is memorized.

3.3.1 Menu items

ot: AIR probe offset (air probe setting)

ur: Value read by the R.H. sensor

ut: Probe Offset PT4






uS: Humidity setpoint

ui: Humidity hysteresis


CF: Scale

ub: Buzzer volume






Set AIR probe offset**To set the air probe regulation**

- select 
- press  to change settings
- increase or decrease the value with the icons  
- press  to confirm
- By default it is set to 0.*
- The setting range is from a minimum of -12.0 °C to a maximum of 12.0 °C.*






Set probe offset RH

 Modify only after real deviations from an actual measurement with professional instrumentation have been established.






To set the RH probe regulation

- select 
- press  to change settings
- increase or decrease the value with the icons  
- press  to confirm






Set the humidity setpoint**To set the humidity setpoint**

- select 
- press  to change settings
- increase or decrease the value with the icons  
- press  to confirm
- The setting range is from 20.0% to 90.0%.*






Setting the humidity hysteresis**To set the humidity hysteresis**

- select 
- press  to change settings
- increase or decrease the value with the icons  
- press  to confirm
- The setting range is from 1 (min) to 30 (max).*

3.3.2 Scale**To change the temperature unit of measure**

- select 
- press  to change settings
- select °C or °F
- use the   icons to move inside the menu
- press  to confirm
- By default the temperature unit of measure is °C.*

3.3.3 Adjusting buzzer volume**To change the volume**


- select 
- press  to change settings
- operate the   keys to decrease or increase the desired value
- press  to confirm
- The volume setting range is from 00 (min) to 03 (max).*

 The volume changes after confirm the modification.


3.4 Warnings**3.4.1 Long period shut-down**

For seasonal shutdowns or for long periods:




- disable the device
- set the main system switch to Off

 The antifreeze function is not on.





3.4.2 In case of fancoil blockage

 This procedure should only be carried out in the event that the control locks and no longer responds to commands.






In case of control blockage

- press both keys  and  for 10 seconds
-  appears on the display accompanied by a beep.
The fancoil has been reset.


3.4.3 Alarm display on wall control panel


-  In the event of an alarm, the device still maintains active functions.
-  The symbol  is displayed on the wall control panel to indicate alarms.
-  To access the Setup menu, it is necessary to access the Basic menu. See section "[Ref]" .

To visualise errors on the wall control panel

- access the basic menu
- then press .
- Appears .
- press .
- press  to confirm
- Appears .
- Then the number assigned to the fancoil and the alarm code are displayed.



To exit the menu

- press the icon  for 10 seconds
- or wait 30 seconds the automatic shutdown

-  After 30 seconds from the last action the control goes out and the settings is memorized.

Alarms displayed on the wall control panel



- E2 Faulty internal fan motor or disconnected
None of the modes can be activated.
- E3 Water temperature probe H2/T2 disconnected or failure
None of the modes can be activated.
- E6 Fancoil block for unsuitable water
None of the modes can be activated.
- E7 Module Communication Alarm
Bluetooth communication not functioning.
- E8 Communication error alarm
Error in the communication between the wall control panel and the fancoil. None of the unit's functions can be activated.
- h2o Incorrect water temperature
*In heating mode, the water temperature is below 30 °C.
In cooling mode, the water temperature is above 20 °C.*

-  Errors E7 and E8 are displayed without the error display procedure on the wall control panel.
-  Alarms E6, E7 and E8 are errors that only occur with the wall-mounted control panel with Bluetooth connection (Code EGB749II).

3.4.4 Reset filter cleaner alarm

-  The flashing  symbol indicates that filter cleaning is required.

After replacement of filters, it is necessary to reset the count of hours of filter use

- press  for about 8 seconds
- The  symbol disappears.

SMART TOUCH REMOTE CONTROLS EEA649 - EEB649 - EFA649 - EFB649

4.1 Interface

4.1.1 Description

Smart Touch wall control panels with thermostat and room temperature and relative humidity probe are electric thermostats with the possibility of control over several appliances with electronic remote control.

Allow:

- room temperature control
- management of the main functions of the device

They are fitted with:

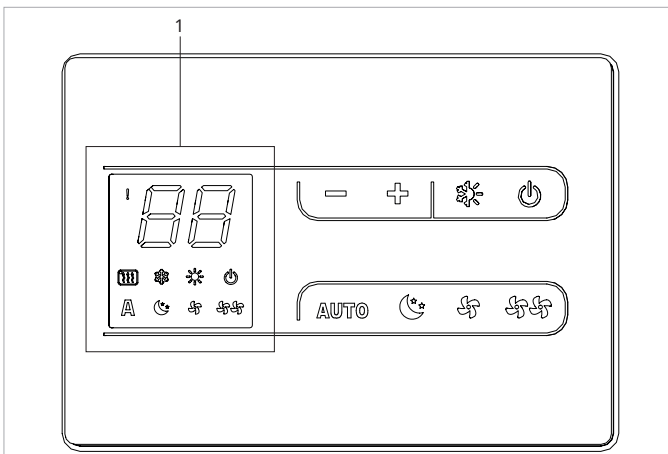
- temperature probe

- internal memory with data saving even in case of shut-down or power outage

- ⚠ The control can control up to a maximum of 30 units.
- ⚠ The room temperature probe ensures an antifreeze safety even when the control is in stand-by
- ⚠ After 20 seconds after the last action the panel brightness is reduced, only the room temperature is seen on the display. The maximum brightness is restored to the pressure of any key.
- ⚠ Any faults of the connected individual terminals are not indicated by the wall panel.

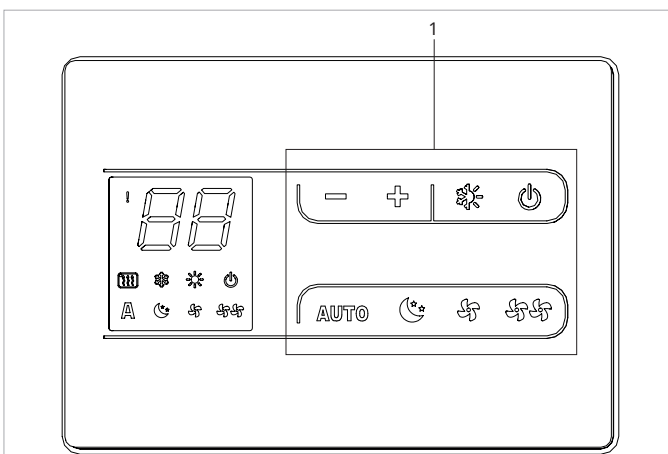
4.1.2 Display

Statuses and active alarms on display.



1.	Display area
A	Automatic function active
☾	Silent function active
☾☾	Maximum ventilation speed active
☾*	Night function active
☀	Heating function on
❄	Cooling function on
⚠	Alarm active with fixed icon
⚠	Supervision active with flashing icon and CP contact closed
⏻	The appliance is in stand-by mode
▤	Resistance enabled indication

4.1.3 Keys functions



1.	Keys area
+	Up key
-	Down key
☀	This can be used to select the operating mode (Cooling or Heating)
AUTO	Enables Automatic function
☾*	Consente di attivare la funzione Notturno con limitazione della velocità di ventilazione e variazione automatica della temperatura
☾☾	Enables Maximum ventilation speed function
⏻	This can be used to switch the unit on or off
☾	Enables the Silent function with ventilation speed limitation to a low maximum value

4.2 Main functions

4.2.1 General start-up

Before the activation:




- ⚠ Make sure that the remote control is connected to the mains.
- ⚠ In case of a master switch on the power supply line, switch on the system by inserting the switch.

To activate the device

- press the  key
The symbol  lights up

4.2.2 Operating mode set-up


to switch the operating mode

- press the  key for about 2 seconds
The symbol  on indicates the Heating function enable
The symbol  on indicate the Cooling function enable

- ⚠ In heating function the symbols is alight with setpoint higher than the room temperature.
- ⚠ In cooling function the symbols is alight with setpoint lower than the room temperature.
- ⚠ When the setpoint is incorrect both symbols are switched off.

4.2.3 Put in stand-by the control



To put in stand-by the control

- press the  key for about 2 seconds
The control goes out

- ⚠ In stand-by mode the control ensures an antifreeze safety. In case of temperature <5 °C, the hot water solenoid valve outputs and boiler consent are activated automatically.

4.2.4 Set room temperature



To set-up the temperature

- operate the   keys to decrease or increase the desired value
The displayed value change

- ⚠ The adjustment range goes from 16 to 28 °C, with a resolution of 0,5 °C.
- ⚠ Out of range values from 5 °C and 40 °C are allowed, except in automatic mode. These value should be set only for short periods of time.

4.2.5 Automatic operation



To select the Automatic function

- press the  key for about 2 seconds
The symbol  on indicates the Automatic function enable

- ⚠ The ventilation speed is automatically adjusted between a minimum value and a maximum value based on an algorithm type PI, according to the actual distance from the room temperature set-point.

4.2.6 Silent operation



To select the Silent operation

- press the  key for about 2 seconds
The symbol  on indicates the Silent function enable

- ⚠ The ventilation speed is limited at a more reduced maximum value.

4.2.7 Night function



To select the Night function

- press the  key for about 2 seconds
The symbol  on indicate the Night function enable

- ⚠ The ventilation speed is limited at a very low value.
- ⚠ The set temperature is automatically changed:
 - in heating function decreases by 1 °C after one hour and by another degree after 2 hours
 - in cooling function decreases by 1 °C after one hour and by another degree after 2 hours

4.2.8 Maximum ventilation speed

To select the operation at the maximum ventilation speed

- press the  key for about 2 seconds
The symbol  on indicates the maximum speed function enable

- ⚠ Maximum power output is immediately obtained both in heating and cooling.
- ⚠ After reaching the desired room temperature, select a different function to increase the thermal and acoustic comfort.

4.2.9 Set the key lock




To set-up the key locking

- press both   keys for 2 seconds
The text  appearing on the display

- ⚠ All settings are inhibited by the user.
- ⚠ Repeat the sequence to unlock the control.

4.2.10 Brightness reduction


To reduce the display brightness


- press the  key for 5 seconds
The text  appearing on the display
- press the  key to decrease the value, wait 20 seconds

- ⚠ After 20 seconds from the last action the panel brightness will be reduced to increase the comfort during night use. On the display will appear only the room temperature.


4.2.11 Room temperature probe offset adjustment


To adjust the room temperature probe offset


- from display off, hold the key  for about 5 seconds
Access to the variation menu of the AIR probe offset displayed on the display.

 Since the room temperature probe is located at the bottom of the unit, it is possible that in some cases the measurement may differ from the actual temperature.

 Use this adjustment carefully.


 This adjustment must be carried out only after having found actual deviations from the room temperature using a reliable tool.


 Adjust the measured value within a range of +/- 10 °C in steps of 0,1 °C.

 After 20 seconds from the last action the control goes out and the settings is memorized.

Deactivation

To deactivate the display


- press the key  for about 2 seconds
All the light signals go off

 In stand-by mode, the control guarantees antifreeze protection.



4.2.13 WiFi network On, Off and Reset

Setting only valid for EFA649 - EFB649 controls.



To activate the WiFi network

- from the display on, press  for about 10 seconds
The text "On" appearing on the display.
- do not touch any keys for another 10 seconds
The WiFi network is active and remains visible and usable with the last configured name.

To reset and restore the WiFi network to its original configuration

- from the display on, press  for about 10 seconds
The text "On" appearing on the display.
- press  again
The text "rSt" appearing on the display.
- do not touch any keys for another 10 seconds
- take off and restore tension to the control
The WiFi network is switched off.

To turn off the WiFi network


- from the display on, press  for about 10 seconds
The text "On" appearing on the display.
- press again the  key again until Off appears
The text "Off" appearing on the display.
- do not touch any keys for another 10 seconds
The WiFi network is turned off and will not be displayed on your smartphone or tablet.

4.3 Warnings

4.3.1 Long period shut-down





For seasonal shutdowns or for long periods:

- disable the device
- set the main system switch to Off

 The antifreeze function is not on.

4.3.2 Alarm display on wall control panel

Displayed alarms

-  E1 Room temperature probe disconnected or faulty
None of the modes can be activated.
-  E2 Fault or connection of a remote double room sensor on one of the fan coil units
None of the modes can be activated.
-  E3 Humidity probe disconnected or faulty
None of the modes can be activated.
-  E4 Air quality probe disconnected or faulty
None of the modes can be activated.

MAINTENANCE

Routine maintenance is essential to keep the device always efficient, safe and reliable over time.

5.1 Preliminary warnings

Before each cleaning and maintenance intervention:

- disconnect the device from the power mains by turning the system master switch to "OFF"
- ⊖ Carrying out any technical or cleaning work before disconnecting the unit from the power supply is forbidden.
- ⚠ Make sure that there is no voltage before operating.
- ⚠ After completing the maintenance work, must be restored the original condition.

⚠ Warnings:

- If water leaks from the device, you must switch it off immediately and disconnect the power supply. Then, call the nearest customer service centre.
- The device must not be installed in rooms where there are explosive gases or where there are conditions of humidity and temperature out of the limits defined in the installation manual.
- Clean the filter regularly.

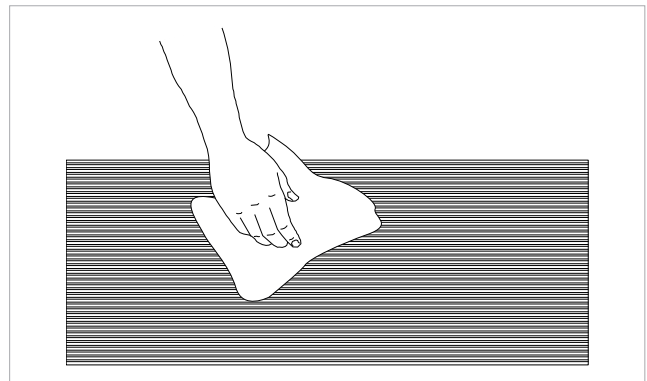
5.2 Routine maintenance

The routine maintenance plan includes the following cleaning operations.

It can be done with:

- six-monthly periodicity
- ⚠ Wait for the components to cool down in order to avoid any burns.
- ⚠ After completing the maintenance work, must be restored the original condition.
- ⊖ It is forbidden to open the access doors and carry out any technical or cleaning intervention, before having disconnect the device from the mains supply by placing the main switch of the system on "OFF".

5.2.1 External cleaning



Clean the external surface of the grid using a soft cloth dampened with water.

- ⚠ Avoid dripping water in the device.
- ⚠ Do not use abrasive sponges or abrasive or corrosive detergents as you might damage the painted surface.
- ⚠ Disconnect the unit from the power supply before each cleaning and maintenance intervention by setting the main power supply switch to off.

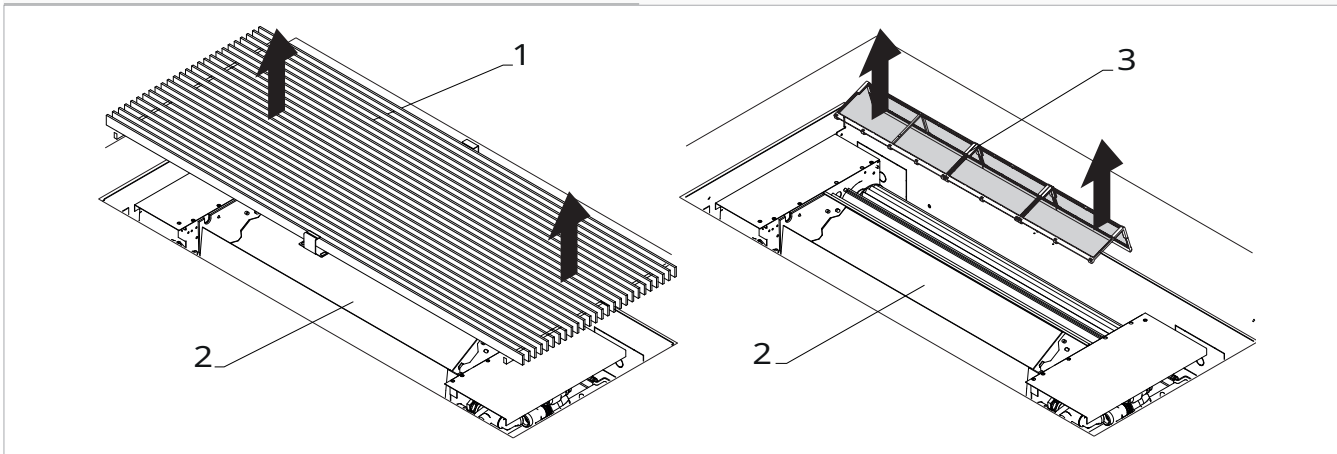
5.2.2 Air intake filter cleaning

Cleaning the filter must be carried out:

- after prolonged operation, considered the concentration of impurities in the air
- when you plan to restart the system after prolonged disuse

- 1. Floor cover grid
- 2. Air intake filter

3. Unit



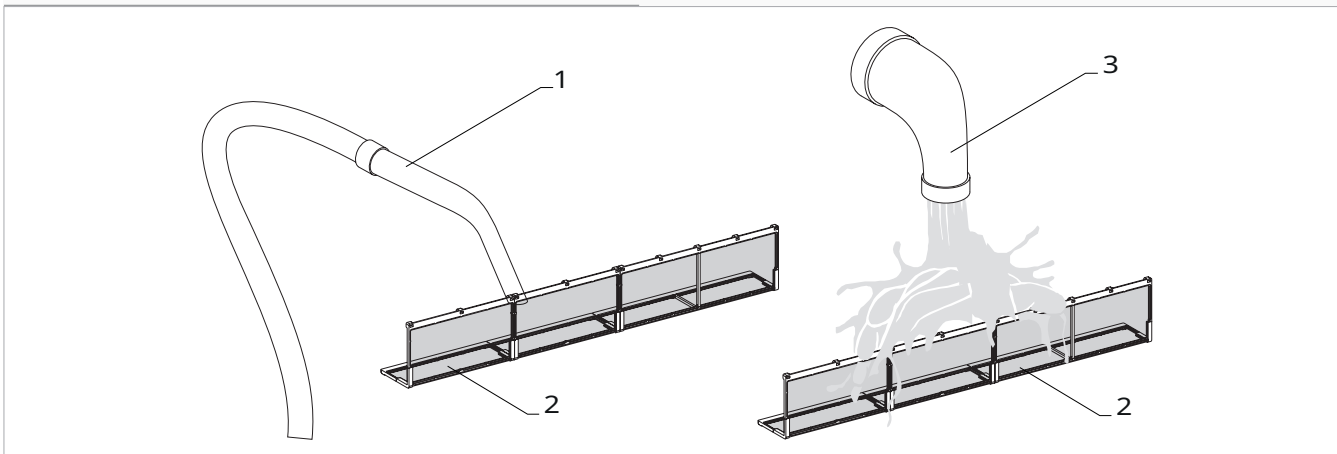
To extract the filter:

- Lift up and remove the floor covering grid
- remove air intake filter

- lift the air intake filter slightly
- rotate until the complete exit from the housing
- remove the air intake filter

- 1. Vacuum cleaner
- 2. Air intake filter

3. Running water



To clean the filters:

- use a vacuum cleaner
- aspirate dust
- wash the filter with running water
- allow it dry

⚠ After finishing the cleaning of the filter, check that the grid is mounted correctly.

⚠ The device features a safety switch that prevents the fan from starting if the mobile panel is incorrectly mounted or the filter are missing.

⚠ Do not use the device without its mesh filter.

⊘ It is forbidden to use the device without its mesh filter.

Inserting the filter

Remount the filter paying particular attention to introduce the lower flap in its housing.

5.3 Suggestions for energy saving

For a correct operation of the device and a great energy saving:

- keep the filters clean
- keep the doors and windows of the locations fitted with air conditioning systems closed as much as possible
- During summer limit the entry of direct sun rays into the rooms to be air-conditioned by means of external screens (projections, curtains, shutters, etc.)



innova

INNOVA S.r.l.
Via I Maggio 8 - 38089 Storo (TN) - ITALY
tel. +39.0465.670104 - fax +39.0465.674965
info@innovaenergie.com